62TE - GAS

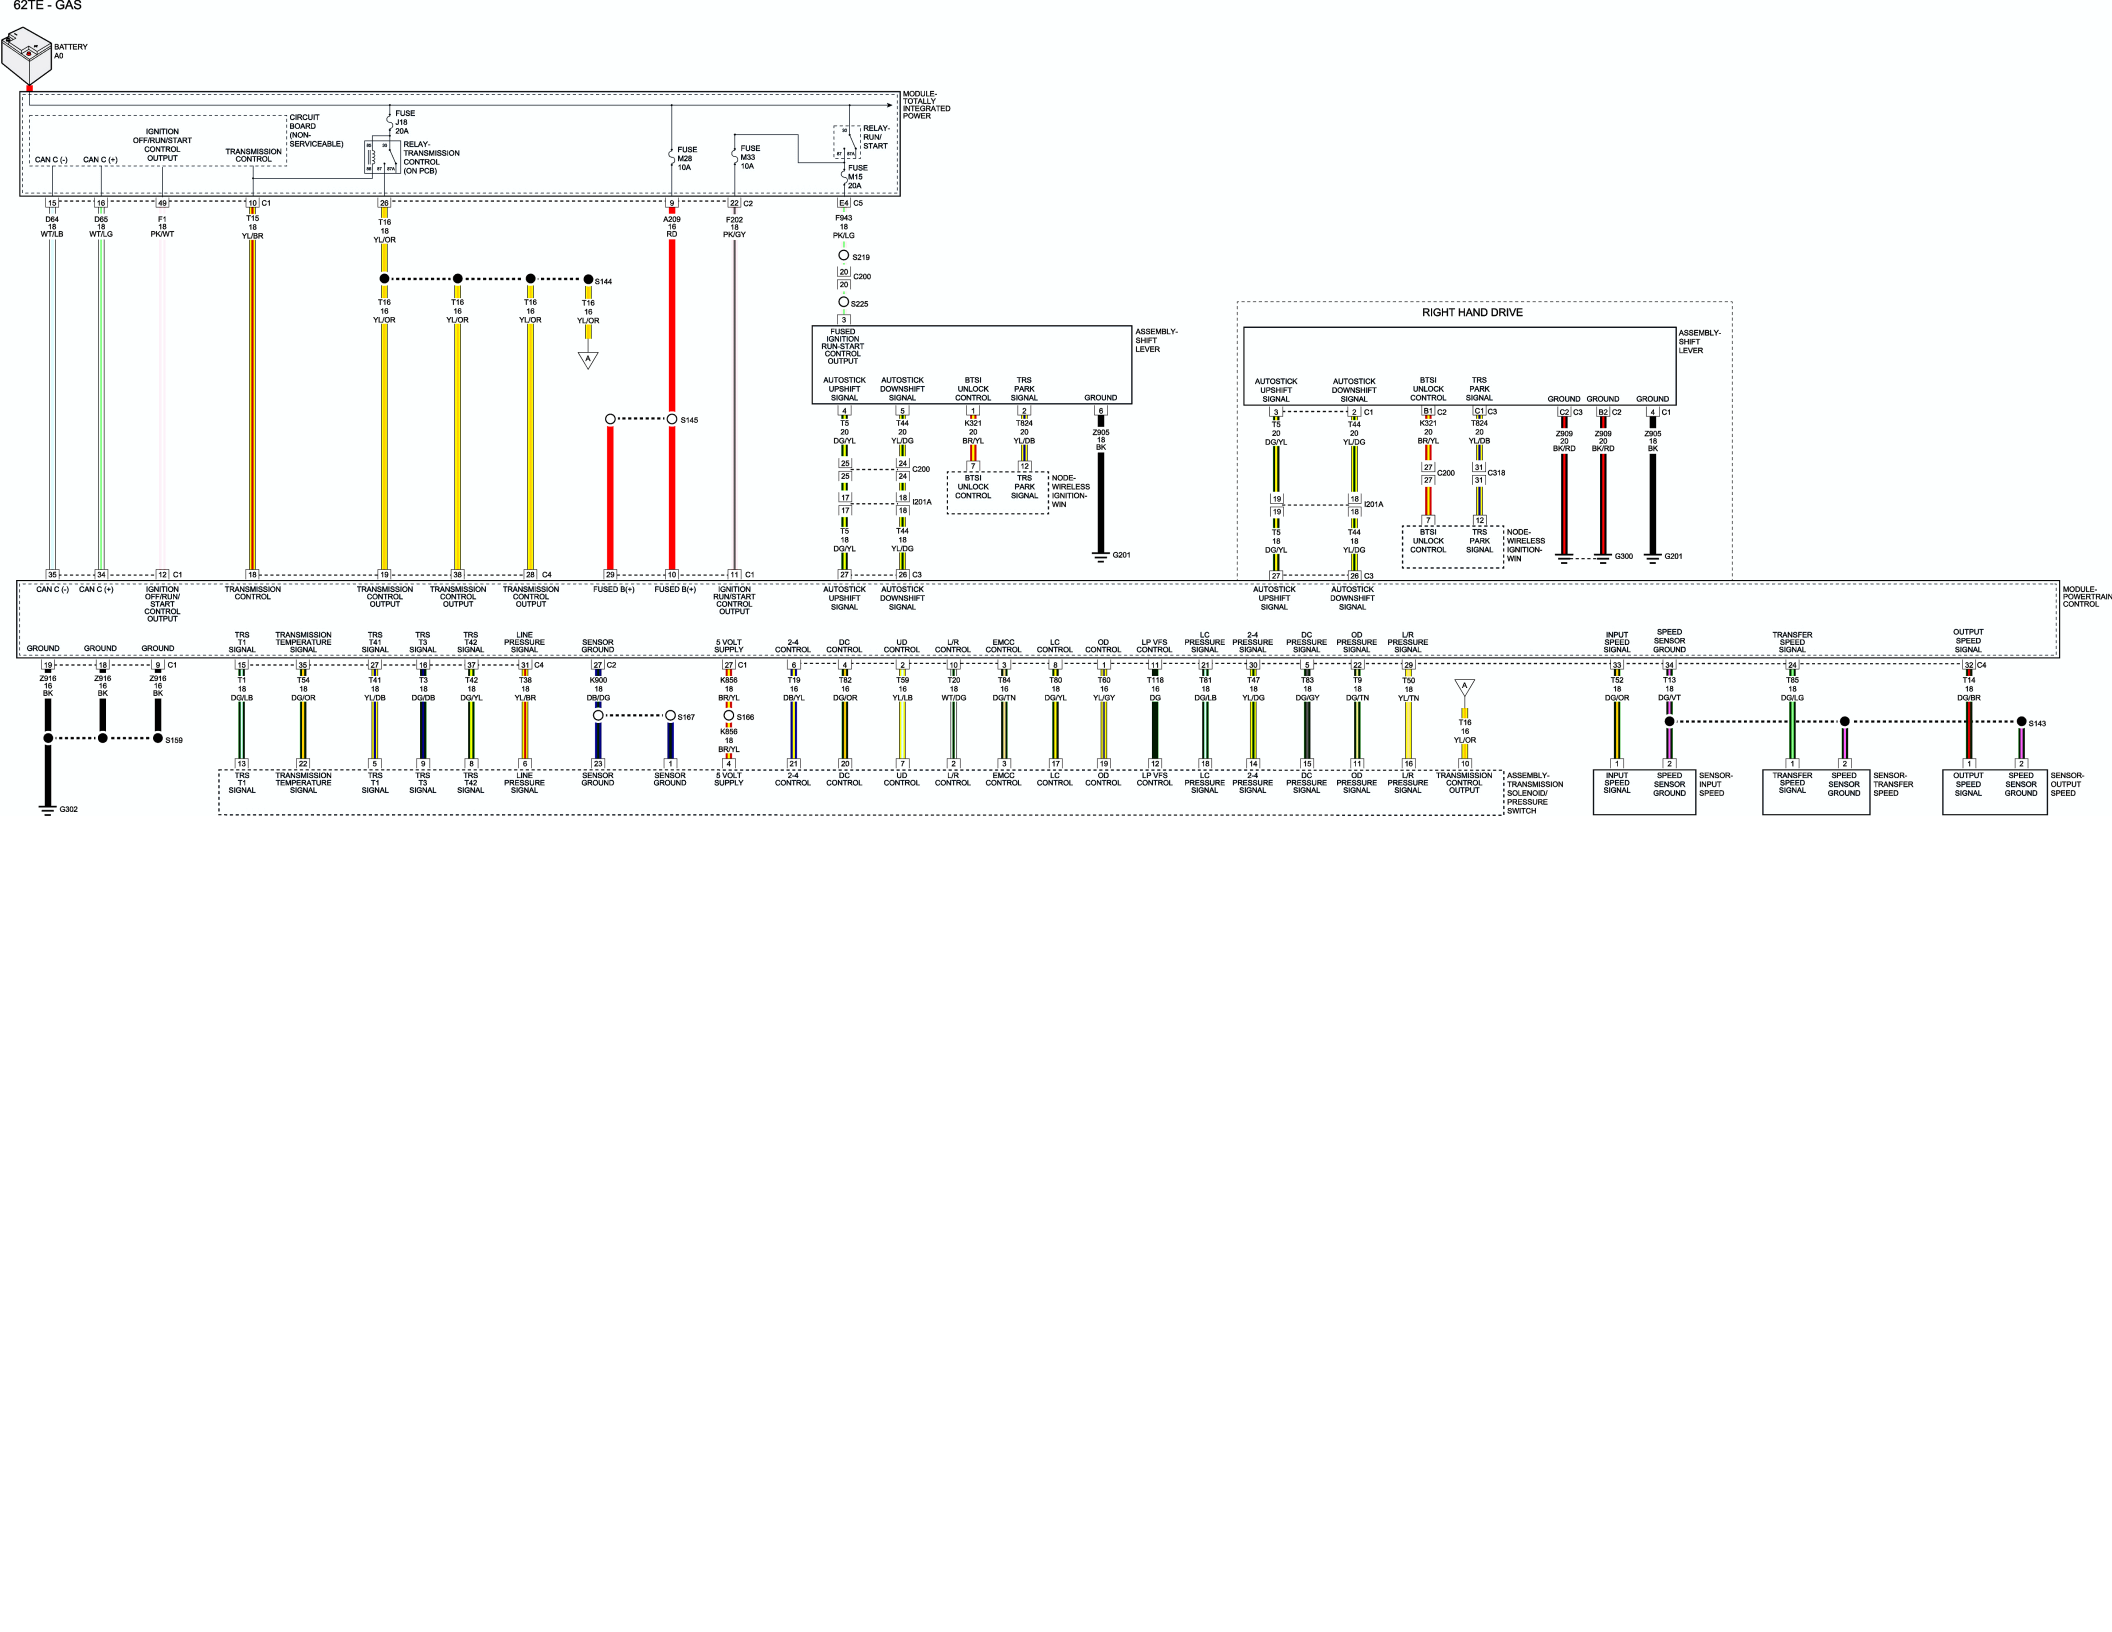
BATTERY
A0
MODULE-
TOTALLY
INTEGRATED
POWER
CIRCUIT
BOARD
(NON-
SERVICEABLE)
IGNITION
OFF/RUN/START
CONTROL
OUTPUT
TRANSMISSION
CONTROL
CAN C (-)
CAN C (+)
FUSE
J18
20A
RELAY-
TRANSMISSION
CONTROL
(ON PCB)
FUSE
M28
10A
FUSE
M33
10A
RELAY-
RUN/
START
FUSE
M15
20A
D64
18
WT/LB
D65
18
WT/LG
F1
18
PK/WT
T15
18
YL/BR
T16
18
YL/OR
A209
16
RD
F202
18
PK/GY
F943
18
PK/LG
S219
C200
S225
S144
S145
FUSED
IGNITION
RUN-START
CONTROL
OUTPUT
ASSEMBLY-
SHIFT
LEVER
AUTOSTICK
UPSHIFT
SIGNAL
AUTOSTICK
DOWNSHIFT
SIGNAL
BTSI
UNLOCK
CONTROL
TRS
PARK
SIGNAL
GROUND
T5
20
DG/YL
T44
20
YL/DG
K321
20
BR/YL
T824
20
YL/DB
Z905
18
BK
I201A
NODE-
WIRELESS
IGNITION-
WIN
G201
RIGHT HAND DRIVE
C318
Z909
20
BK/RD
G300
MODULE-
POWERTRAIN
CONTROL
GROUND
Z916
16
BK
S159
G302
TRS
T1
SIGNAL
TRANSMISSION
TEMPERATURE
SIGNAL
TRS
T41
SIGNAL
TRS
T3
SIGNAL
TRS
T42
SIGNAL
LINE
PRESSURE
SIGNAL
SENSOR
GROUND
K600
18
DB/OG
S167
SENSOR
GROUND
5 VOLT
SUPPLY
K856
18
BR/YL
S166
5 VOLT
SUPPLY
2-4
CONTROL
DC
CONTROL
UD
CONTROL
L/R
CONTROL
EMCC
CONTROL
LC
CONTROL
OD
CONTROL
LP VFS
CONTROL
LC
PRESSURE
SIGNAL
2-4
PRESSURE
SIGNAL
DC
PRESSURE
SIGNAL
OD
PRESSURE
SIGNAL
L/R
PRESSURE
SIGNAL
TRANSMISSION
CONTROL
OUTPUT
ASSEMBLY-
TRANSMISSION
SOLENOID/
PRESSURE
SWITCH
INPUT
SPEED
SIGNAL
SPEED
SENSOR
GROUND
SENSOR-
INPUT
SPEED
TRANSFER
SPEED
SIGNAL
SENSOR-
TRANSFER
SPEED
OUTPUT
SPEED
SIGNAL
S143
SENSOR-
OUTPUT
SPEED