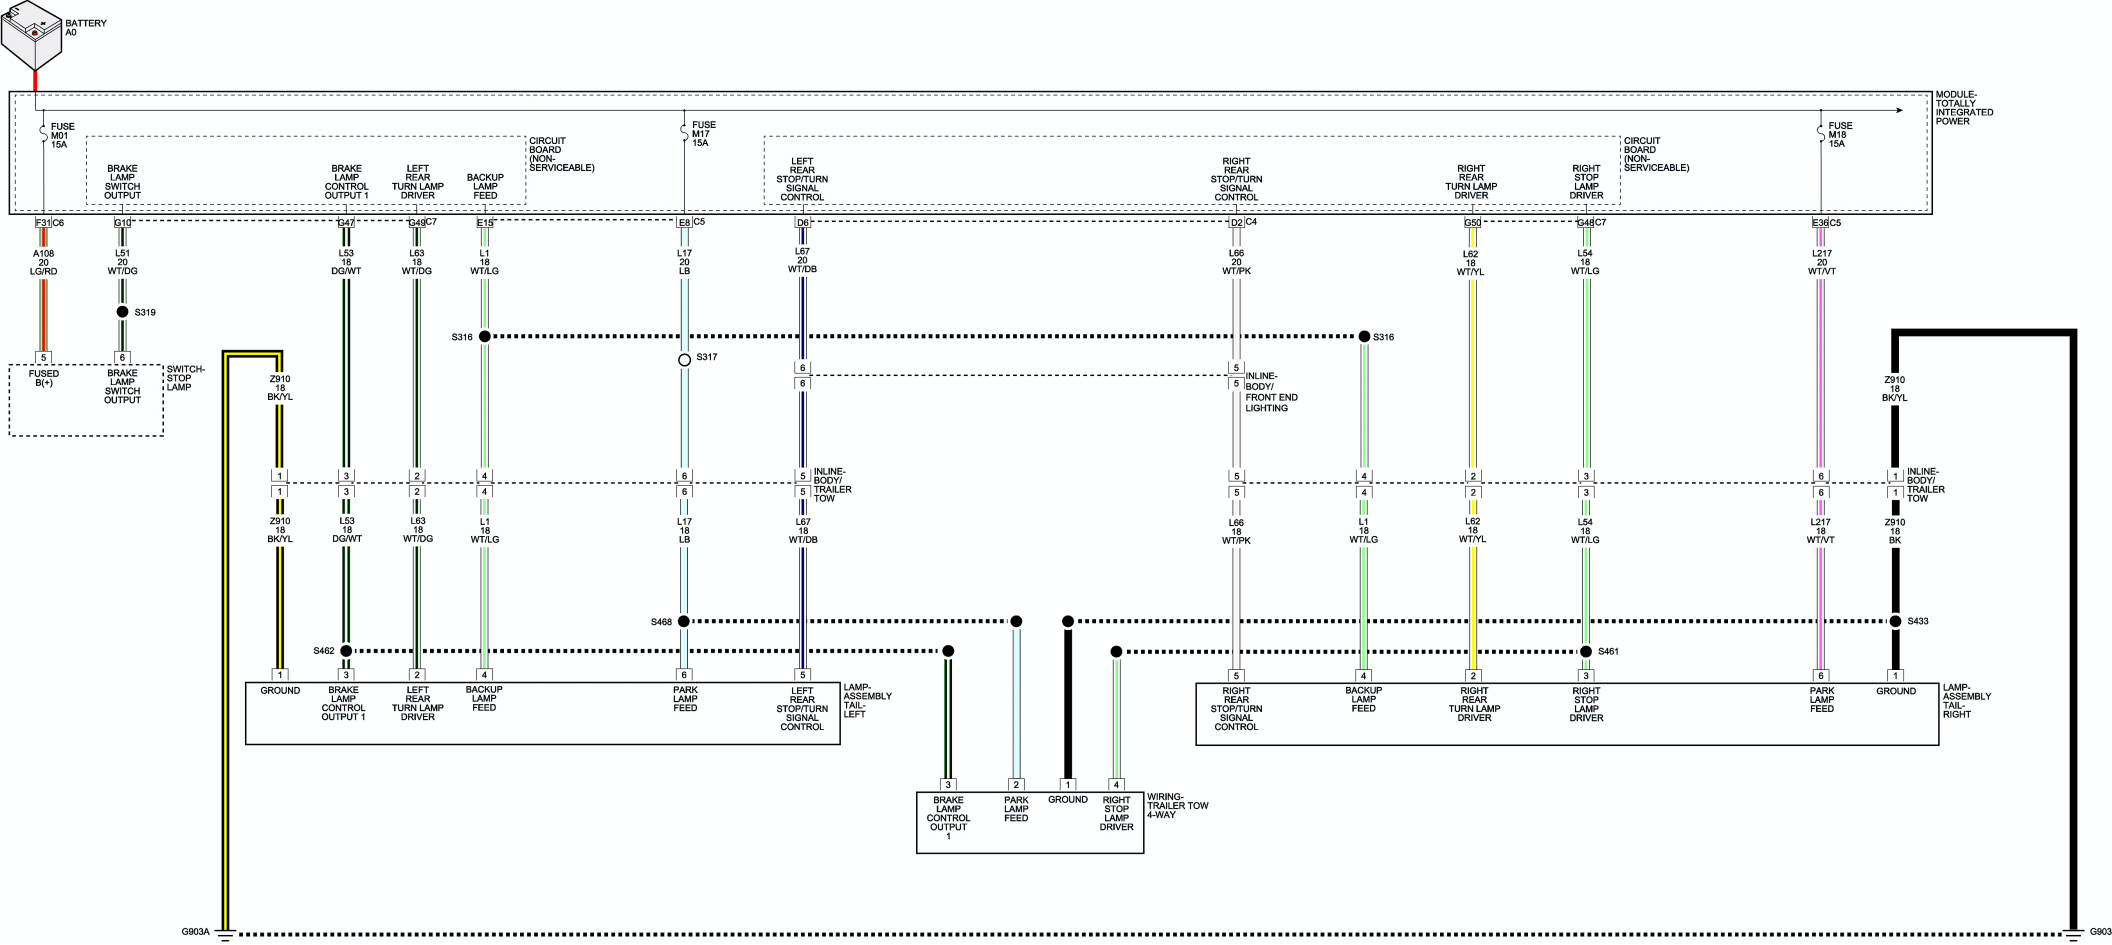
BATTERY
A0
MODULE-
TOTALLY
INTEGRATED
POWER
FUSE
M01
15A
FUSE
M17
15A
FUSE
M18
15A
CIRCUIT
BOARD
(NON-
SERVICEABLE)
CIRCUIT
BOARD
(NON-
SERVICEABLE)
BRAKE
LAMP
SWITCH
OUTPUT
BRAKE
LAMP
CONTROL
OUTPUT 1
LEFT
REAR
TURN LAMP
DRIVER
BACKUP
LAMP
FEED
LEFT
REAR
STOP/TURN
SIGNAL
CONTROL
RIGHT
REAR
STOP/TURN
SIGNAL
CONTROL
RIGHT
REAR
TURN LAMP
DRIVER
RIGHT
STOP
LAMP
DRIVER
F31 C6
G10
G47
G49 C7
E15
E8 C5
D6
D2 C4
G50
G48 C7
E36 C5
A108
20
LG/RD
L51
20
WT/DG
L53
18
DG/WT
L63
18
WT/DG
L1
18
WT/LG
L17
20
LB
L67
20
WT/DB
L66
20
WT/PK
L62
18
WT/YL
L54
18
WT/LG
L217
20
WT/VT
S319
S316
S317
S316
FUSED
B(+)
BRAKE
LAMP
SWITCH
OUTPUT
SWITCH-
STOP
LAMP
INLINE-
BODY/
FRONT END
LIGHTING
Z910
18
BK/YL
INLINE-
BODY/
TRAILER
TOW
Z910
18
BK/YL
L53
18
DG/WT
L63
18
WT/DG
L1
18
WT/LG
L17
18
LB
L67
18
WT/DB
L66
18
WT/PK
L1
18
WT/LG
L62
18
WT/YL
L54
18
WT/LG
L217
18
WT/VT
Z910
18
BK
INLINE-
BODY/
TRAILER
TOW
S468
S462
S461
S433
GROUND
BRAKE
LAMP
CONTROL
OUTPUT
1
LEFT
REAR
TURN LAMP
DRIVER
BACKUP
LAMP
FEED
PARK
LAMP
FEED
LEFT
REAR
STOP/TURN
SIGNAL
CONTROL
LAMP-
ASSEMBLY
TAIL-
LEFT
RIGHT
REAR
STOP/TURN
SIGNAL
CONTROL
BACKUP
LAMP
FEED
RIGHT
REAR
TURN LAMP
DRIVER
RIGHT
STOP
LAMP
DRIVER
PARK
LAMP
FEED
GROUND
LAMP-
ASSEMBLY
TAIL-
RIGHT
BRAKE
LAMP
CONTROL
OUTPUT
1
PARK
LAMP
FEED
GROUND
RIGHT
STOP
LAMP
DRIVER
WIRING-
TRAILER TOW
4-WAY
G903A
G903