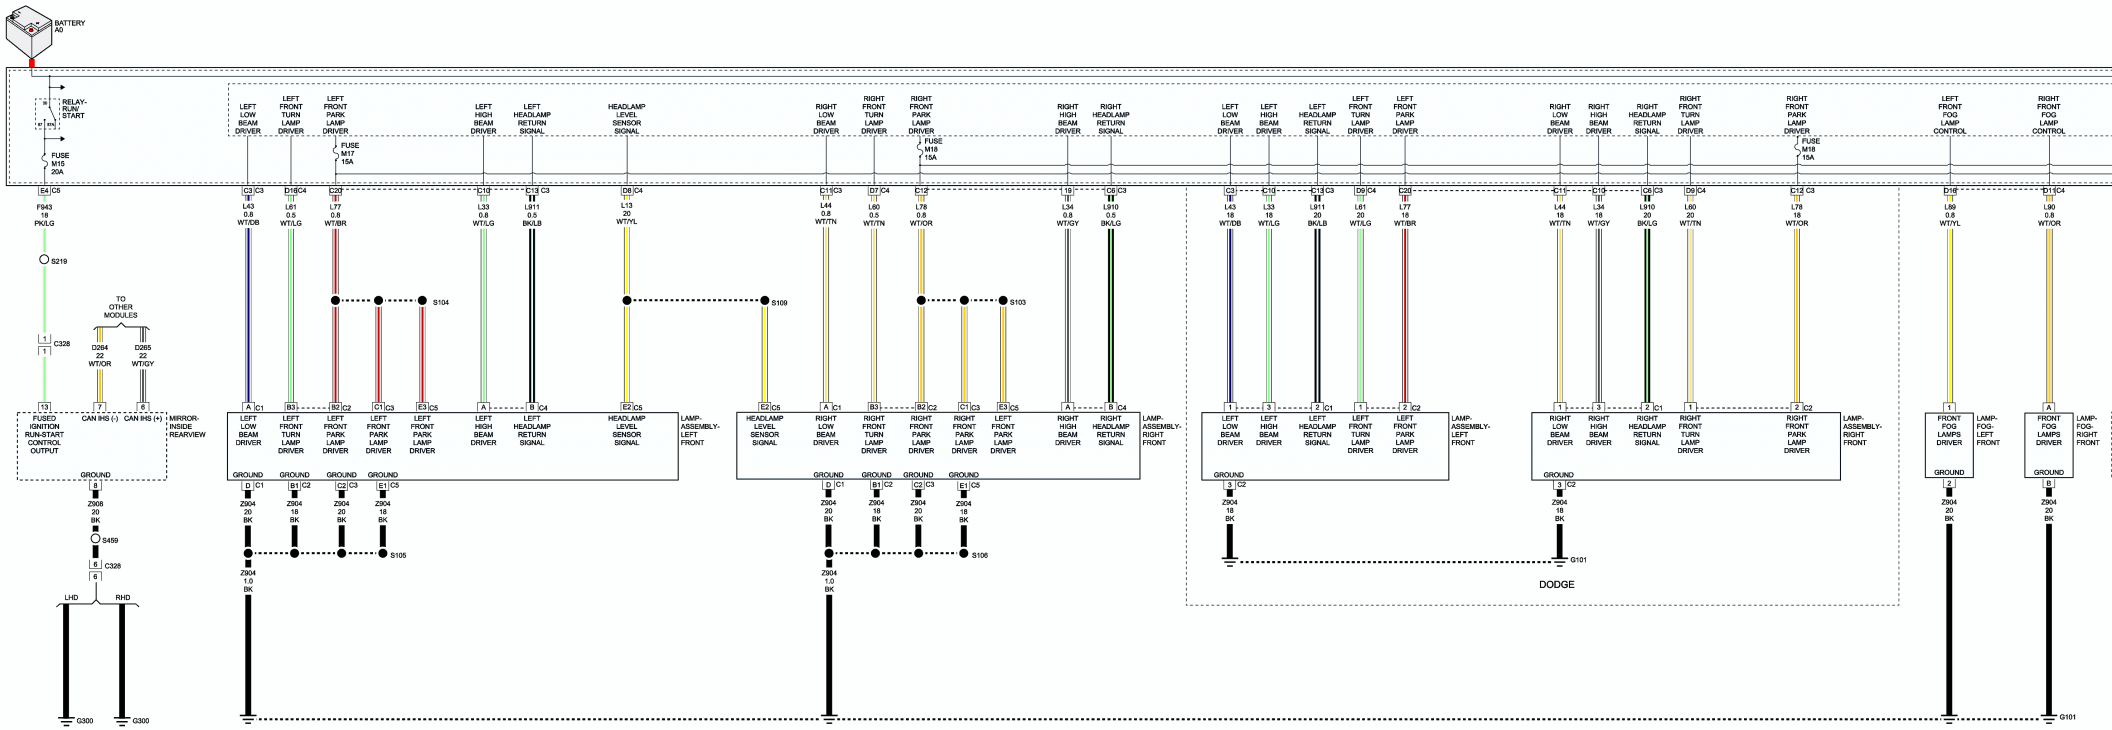
BATTERY
A0
RELAY-
RUN/
START
FUSE
M15
20A
LEFT
LOW
BEAM
DRIVER
LEFT
FRONT
TURN
LAMP
DRIVER
LEFT
FRONT
PARK
LAMP
DRIVER
FUSE
M17
15A
LEFT
HIGH
BEAM
DRIVER
LEFT
HEADLAMP
RETURN
SIGNAL
HEADLAMP
LEVEL
SENSOR
SIGNAL
RIGHT
LOW
BEAM
DRIVER
RIGHT
FRONT
TURN
LAMP
DRIVER
RIGHT
FRONT
PARK
LAMP
DRIVER
FUSE
M18
15A
RIGHT
HIGH
BEAM
DRIVER
RIGHT
HEADLAMP
RETURN
SIGNAL
LEFT
LOW
BEAM
DRIVER
LEFT
HIGH
BEAM
DRIVER
LEFT
HEADLAMP
RETURN
SIGNAL
LEFT
FRONT
TURN
LAMP
DRIVER
LEFT
FRONT
PARK
LAMP
DRIVER
RIGHT
LOW
BEAM
DRIVER
RIGHT
HIGH
BEAM
DRIVER
RIGHT
HEADLAMP
RETURN
SIGNAL
RIGHT
FRONT
TURN
LAMP
DRIVER
RIGHT
FRONT
PARK
LAMP
DRIVER
FUSE
M18
15A
LEFT
FRONT
FOG
LAMP
CONTROL
RIGHT
FRONT
FOG
LAMP
CONTROL
F943
18
PK/LG
S219
TO
OTHER
MODULES
C328
D264
22
WT/OR
D265
22
WT/GY
FUSED
IGNITION
RUN-START
CONTROL
OUTPUT
CAN IHS (-)
CAN IHS (+)
MIRROR-
INSIDE
REARVIEW
GROUND
Z908
20
BK
S459
C328
LHD
RHD
G300
G300
L43
0.8
WT/DB
L61
0.5
WT/LG
L77
0.8
WT/BR
S104
L33
0.8
WT/LG
L911
0.5
BK/LB
L13
20
WT/YL
S109
L44
0.8
WT/TN
L60
0.5
WT/TN
L78
0.8
WT/OR
S103
L34
0.8
WT/GY
L910
0.5
BK/LG
LAMP-
ASSEMBLY-
LEFT
FRONT
LAMP-
ASSEMBLY-
RIGHT
FRONT
Z904
20
BK
Z904
18
BK
S105
Z904
1.0
BK
S106
G101
DODGE
L89
0.8
WT/YL
L90
0.8
WT/OR
LAMP-
FOG-
LEFT
FRONT
LAMP-
FOG-
RIGHT
FRONT

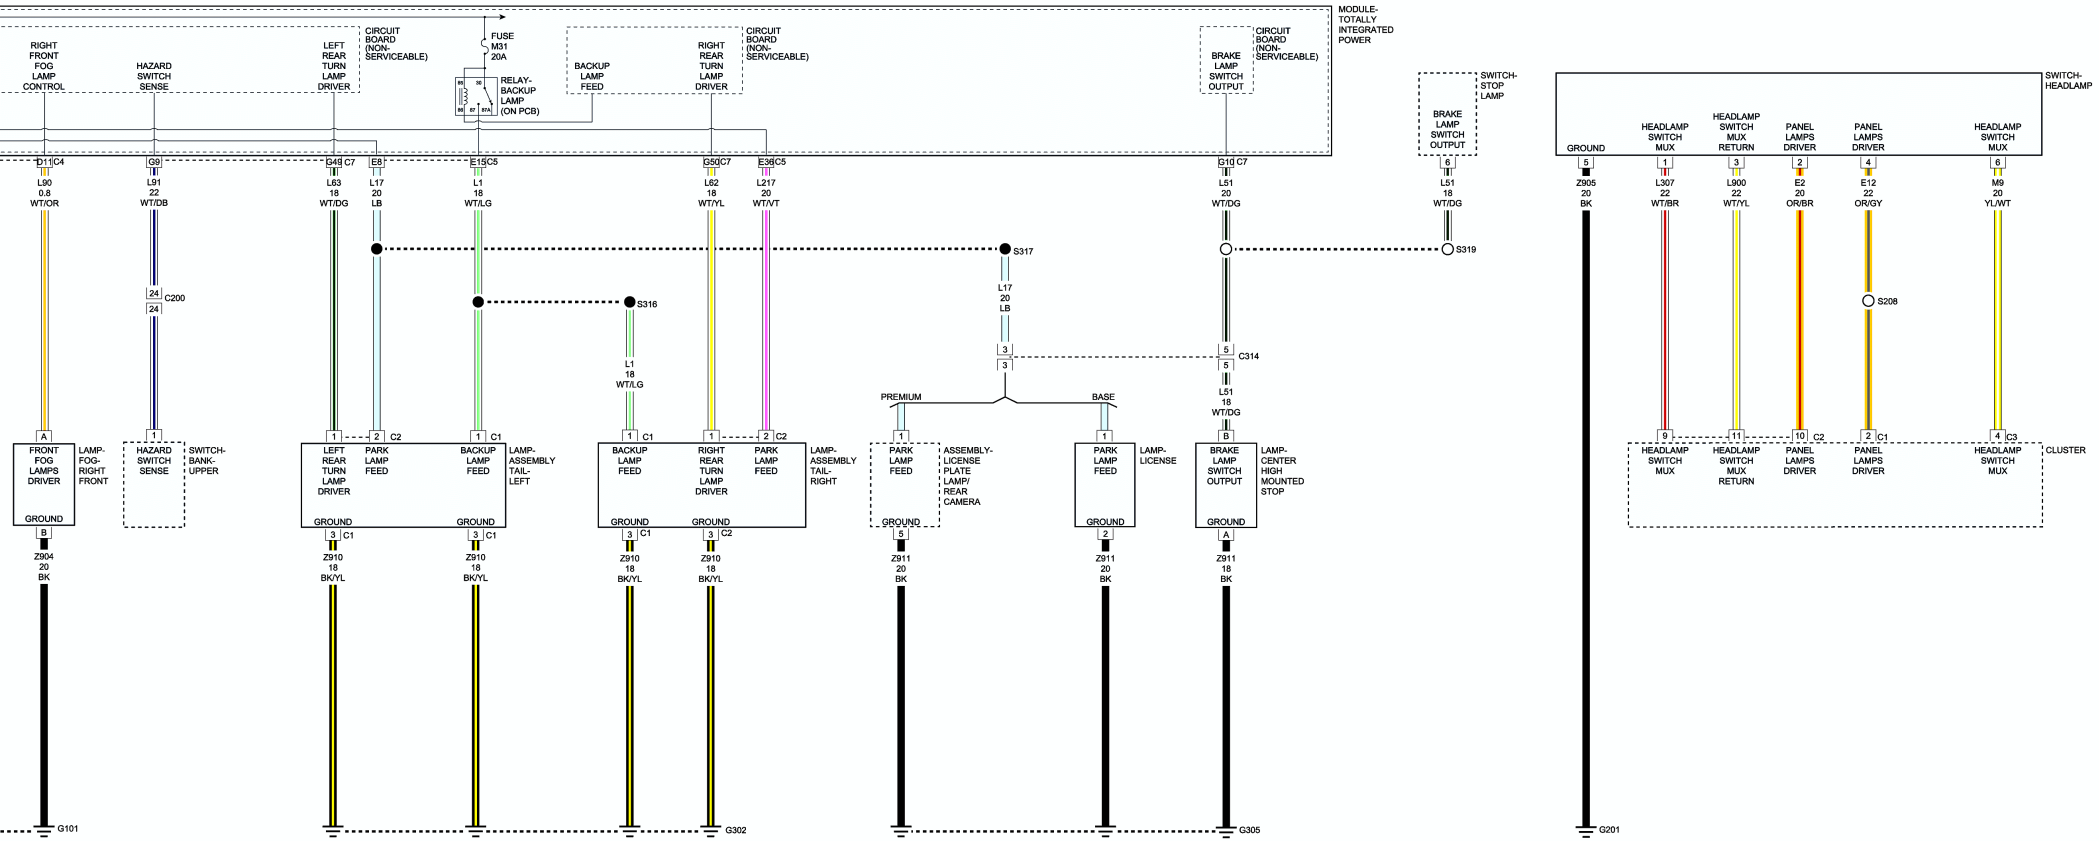
MODULE-
TOTALLY
INTEGRATED
POWER
RIGHT
FRONT
FOG
LAMP
CONTROL
HAZARD
SWITCH
SENSE
LEFT
REAR
TURN
LAMP
DRIVER
CIRCUIT
BOARD
(NON-
SERVICEABLE)
FUSE
M31
20A
RELAY-
BACKUP
LAMP
(ON PCB)
BACKUP
LAMP
FEED
RIGHT
REAR
TURN
LAMP
DRIVER
CIRCUIT
BOARD
(NON-
SERVICEABLE)
BRAKE
LAMP
SWITCH
OUTPUT
CIRCUIT
BOARD
(NON-
SERVICEABLE)
SWITCH-
STOP
LAMP
BRAKE
LAMP
SWITCH
OUTPUT
SWITCH-
HEADLAMP
GROUND
HEADLAMP
SWITCH
MUX
HEADLAMP
SWITCH
MUX
RETURN
PANEL
LAMPS
DRIVER
PANEL
LAMPS
DRIVER
HEADLAMP
SWITCH
MUX
D11 C4
L90
0.8
WT/OR
G9
L91
22
WT/DB
G48 C7
L63
18
WT/DG
E8
L17
20
LB
E15 C5
L1
18
WT/LG
G50 C7
L62
18
WT/YL
E36 C5
L217
20
WT/VT
G10 C7
L51
20
WT/DG
6
L51
18
WT/DG
S317
S319
S316
L17
20
LB
3
3
C314
5
5
L51
18
WT/DG
L1
18
WT/LG
PREMIUM
BASE
C200
24
24
A
FRONT
FOG
LAMPS
DRIVER
LAMP-
FOG-
RIGHT
FRONT
1
HAZARD
SWITCH
SENSE
SWITCH-
BANK-
UPPER
1
2 C2
LEFT
REAR
TURN
LAMP
DRIVER
PARK
LAMP
FEED
1 C1
BACKUP
LAMP
FEED
LAMP-
ASSEMBLY
TAIL-
LEFT
1 C1
BACKUP
LAMP
FEED
1 C1
RIGHT
REAR
TURN
LAMP
DRIVER
2 C2
PARK
LAMP
FEED
LAMP-
ASSEMBLY
TAIL-
RIGHT
1
PARK
LAMP
FEED
ASSEMBLY-
LICENSE
PLATE
LAMP/
REAR
CAMERA
1
PARK
LAMP
FEED
LAMP-
LICENSE
B
A
BRAKE
LAMP
SWITCH
OUTPUT
LAMP-
CENTER
HIGH
MOUNTED
STOP
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
3 C1
3 C1
3 C1
3 C2
5
2
A
Z904
20
BK
Z910
18
BK/YL
Z910
18
BK/YL
Z910
18
BK/YL
Z910
18
BK/YL
Z911
20
BK
Z911
20
BK
Z911
18
BK
G101
G302
G305
5
Z905
20
BK
1
L907
22
WT/BR
3
L900
22
WT/YL
2
E2
20
OR/BR
4
E12
22
OR/GY
6
M9
20
YL/WT
S208
9
11
10 C2
2 C1
4 C3
HEADLAMP
SWITCH
MUX
HEADLAMP
SWITCH
MUX
RETURN
PANEL
LAMPS
DRIVER
PANEL
LAMPS
DRIVER
HEADLAMP
SWITCH
MUX
CLUSTER
G201