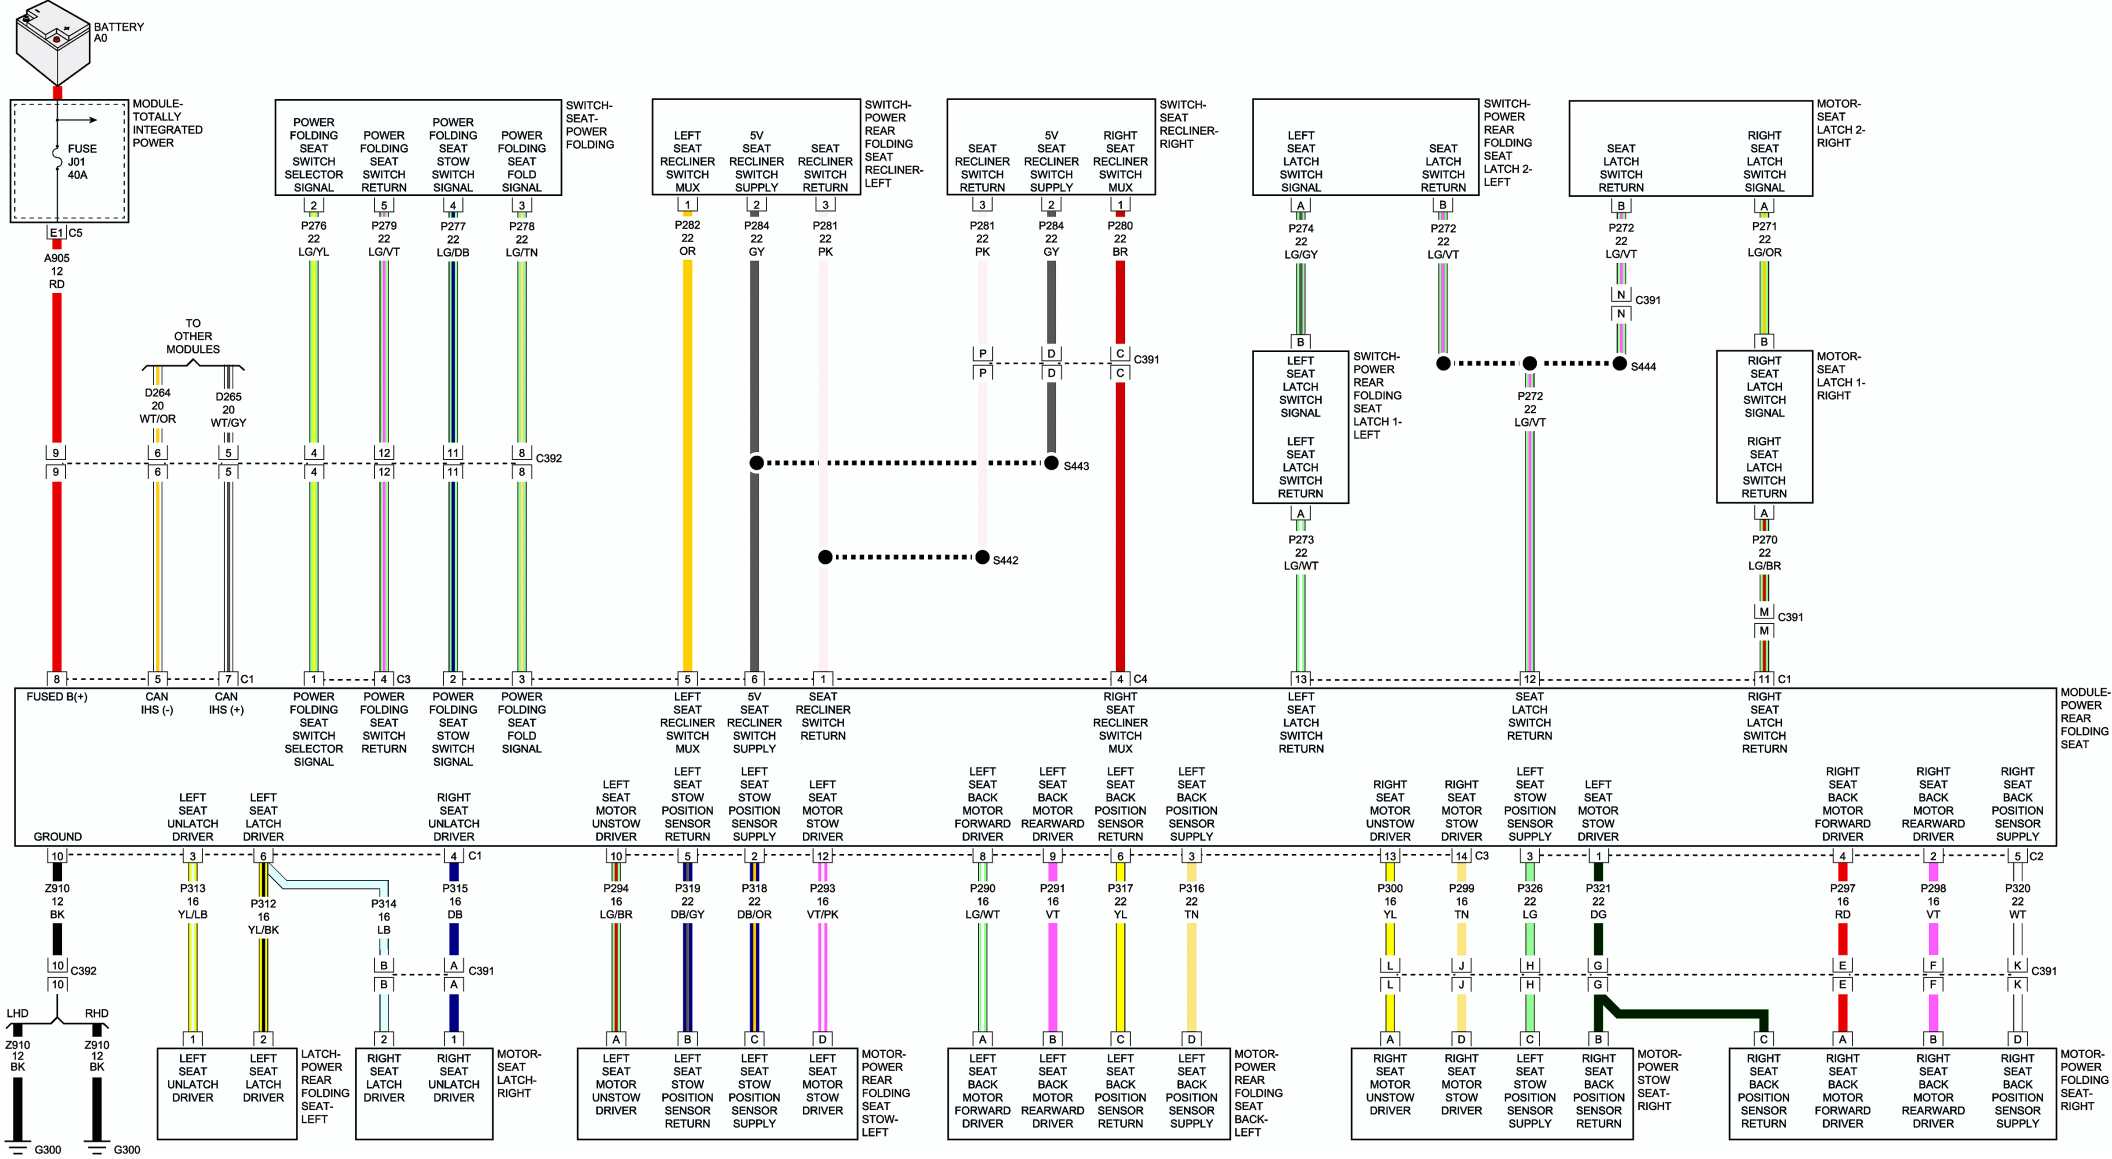
BATTERY A0
MODULE-TOTALLY INTEGRATED POWER
FUSE J01 40A
E1 C5
A905 12 RD
TO OTHER MODULES
D264 20 WT/OR
D265 20 WT/GY
SWITCH-SEAT-POWER FOLDING
POWER FOLDING SEAT SWITCH SELECTOR SIGNAL
POWER FOLDING SEAT SWITCH RETURN
POWER FOLDING SEAT STOW SWITCH SIGNAL
POWER FOLDING SEAT FOLD SIGNAL
P276 22 LG/YL
P279 22 LG/VT
P277 22 LG/DB
P278 22 LG/TN
C392
SWITCH-POWER REAR FOLDING SEAT RECLINER-LEFT
LEFT SEAT RECLINER SWITCH MUX
5V SEAT RECLINER SWITCH SUPPLY
SEAT RECLINER SWITCH RETURN
P282 22 OR
P284 22 GY
P281 22 PK
S443
S442
SWITCH-SEAT RECLINER-RIGHT
SEAT RECLINER SWITCH RETURN
5V SEAT RECLINER SWITCH SUPPLY
RIGHT SEAT RECLINER SWITCH MUX
P281 22 PK
P284 22 GY
P280 22 BR
C391
C4
SWITCH-POWER REAR FOLDING SEAT LATCH 2-LEFT
LEFT SEAT LATCH SWITCH SIGNAL
SEAT LATCH SWITCH RETURN
P274 22 LG/GY
P272 22 LG/VT
S444
MOTOR-SEAT LATCH 2-RIGHT
SEAT LATCH SWITCH RETURN
RIGHT SEAT LATCH SWITCH SIGNAL
P272 22 LG/VT
P271 22 LG/OR
C391
SWITCH-POWER REAR FOLDING SEAT LATCH 1-LEFT
LEFT SEAT LATCH SWITCH SIGNAL
LEFT SEAT LATCH SWITCH RETURN
P273 22 LG/WT
P272 22 LG/VT
MOTOR-SEAT LATCH 1-RIGHT
RIGHT SEAT LATCH SWITCH SIGNAL
RIGHT SEAT LATCH SWITCH RETURN
P270 22 LG/BR
C391
C1
FUSED B(+)
CAN IHS (-)
CAN IHS (+)
POWER FOLDING SEAT SWITCH SELECTOR SIGNAL
POWER FOLDING SEAT SWITCH RETURN
POWER FOLDING SEAT STOW SWITCH SIGNAL
POWER FOLDING SEAT FOLD SIGNAL
LEFT SEAT RECLINER SWITCH MUX
5V SEAT RECLINER SWITCH SUPPLY
SEAT RECLINER SWITCH RETURN
RIGHT SEAT RECLINER SWITCH MUX
LEFT SEAT LATCH SWITCH RETURN
SEAT LATCH SWITCH RETURN
RIGHT SEAT LATCH SWITCH RETURN
MODULE-POWER REAR FOLDING SEAT
GROUND
LEFT SEAT UNLATCH DRIVER
LEFT SEAT LATCH DRIVER
RIGHT SEAT UNLATCH DRIVER
LEFT SEAT MOTOR UNSTOW DRIVER
LEFT SEAT STOW POSITION SENSOR RETURN
LEFT SEAT STOW POSITION SENSOR SUPPLY
LEFT SEAT MOTOR STOW DRIVER
LEFT SEAT BACK MOTOR FORWARD DRIVER
LEFT SEAT BACK MOTOR REARWARD DRIVER
LEFT SEAT BACK POSITION SENSOR RETURN
LEFT SEAT BACK POSITION SENSOR SUPPLY
RIGHT SEAT MOTOR UNSTOW DRIVER
RIGHT SEAT MOTOR STOW DRIVER
LEFT SEAT STOW POSITION SENSOR SUPPLY
LEFT SEAT MOTOR STOW DRIVER
RIGHT SEAT BACK MOTOR FORWARD DRIVER
RIGHT SEAT BACK MOTOR REARWARD DRIVER
RIGHT SEAT BACK POSITION SENSOR SUPPLY
Z910 12 BK
P313 16 YL/LB
P312 16 YL/BK
P314 16 LB
P315 16 DB
C392
C391
C1
P294 16 LG/BR
P319 22 DB/GY
P318 22 DB/OR
P293 16 VT/PK
P290 16 LG/WT
P291 16 VT
P317 22 YL
P316 22 TN
P300 16 YL
P299 16 TN
P326 22 LG
P321 22 DG
C3
P297 16 RD
P298 16 VT
P320 22 WT
C2
LHD
RHD
G300
G300
LATCH-POWER REAR FOLDING SEAT-LEFT
MOTOR-SEAT LATCH-RIGHT
MOTOR-POWER REAR FOLDING SEAT STOW-LEFT
MOTOR-POWER REAR FOLDING SEAT BACK-LEFT
MOTOR-POWER STOW SEAT-RIGHT
MOTOR-POWER FOLDING SEAT-RIGHT